
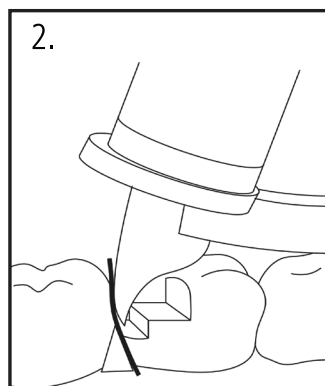
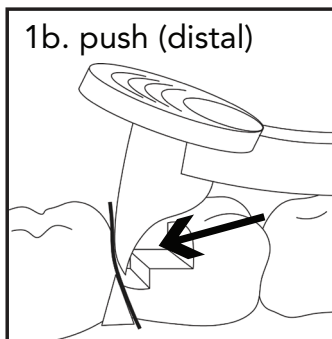


PerForm™

Instructions for Use

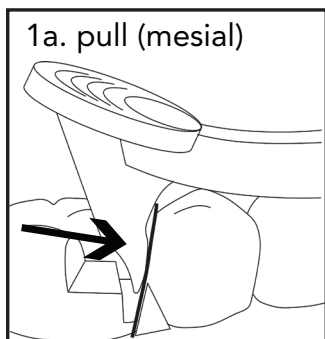

1. Place the first composite increment to the level of the pulpal floor.
2. Press the appropriate end of the PerForm instrument into the uncured composite increment and either push (distal) or pull (mesial) as indicated on the handle until desired contact is achieved. Do not pry! (figure 1a & 1b)
3. Place the curing light directly on the Fresnel lens and cure the composite while maintaining the mesial or distal pressure. (figure 2)
4. Remove the PerForm instrument and fill the small void left by the tip with flowable composite.